



# AG230

| NO. | DESCRIPTION           | NO. | DESCRIPTION          |
|-----|-----------------------|-----|----------------------|
| 1   | UPPER FLANGE          | 29  | FRONT ANTI-DUST RING |
| 2   | DOWN FLANGE           | 30  | ROTOR                |
| 3   | GUARD                 | 31  | REAR ANTI-DUST RING  |
| 4   | SPINDLE               | 32  | BEARING 629Z         |
| 5   | DUST COVER            | 33  | BEARING COVER        |
| 6   | SCREW M5X16           | 34  | WIND GUIDE           |
| 7   | FRONT COVER           | 35  | TAPPING SCREW ST5X75 |
| 8   | O RING                | 36  | STATOR               |
| 9   | BEARING 6203Z         | 37  | HOUSING              |
| 10  | CIRCLIP $\Phi$ 40     | 38  | BRUSH HOLDER         |
| 11  | BIG GEAR              | 39  | SPRING               |
| 12  | NEEDLE BEARING HK1012 | 40  | CARBON BRUSH         |
| 13  | GEAR BOX              | 41  | TAPPING SCREW ST4X8  |
| 14  | TAPPING SCREW ST5X35  | 42  | CARBON BRUSH COVER   |
| 15  | LOCK PIN              | 43  | TAPPING SCREW ST4X12 |
| 16  | O RING                | 44  | TAPPING SCREW ST5X55 |
| 17  | SPRING                | 45  | TAPPING SCREW ST4X18 |
| 18  | LOCK PIN CAP          | 46  | RIGHT HANDLE         |
| 19  | SIDE HANDLE           | 47  | TAPPING SCREW ST4X16 |
| 20  | NUT M8                | 48  | CORD CLAMP           |
| 21  | PINION                | 49  | SWITCH               |
| 22  | WASHER                | 50  | LEFT HANDLE          |
| 23  | WOOL WASHER           | 51  | CORD SLEEVE          |
| 24  | BEARING WASHER        | 52  | CORD                 |
| 25  | O RING                | 53  | WRENCH               |
| 26  | BEARING 6301Z         | 54  | SOFT START           |
| 27  | WASHER                |     |                      |
| 28  | CIRCLIP $\Phi$ 37     |     |                      |