

Fuse disconnecter EFD 10

INSTALLATION INSTRUCTION


LV-fuse-switch disconnecter

Dimensions [mm]



Installation



CAUTION!
Installation by electricians only!

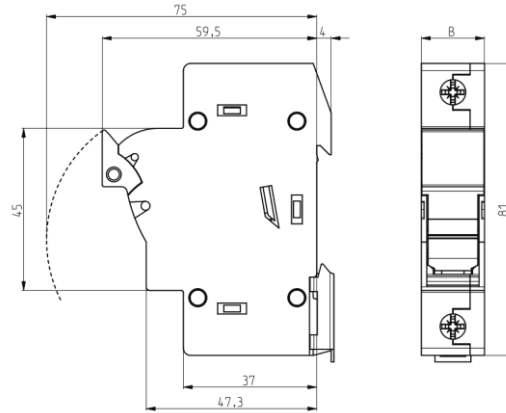

TYPE	1p	1p+N	2p	3p	3p+N
B [mm]	17,5	35	35	52,5	70

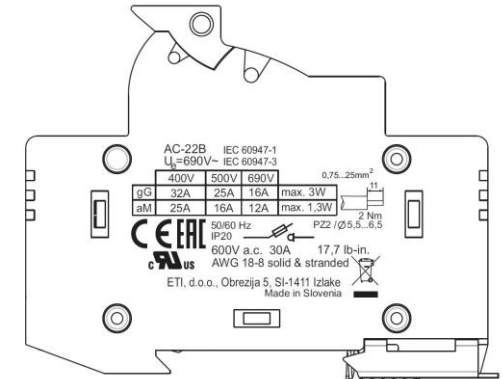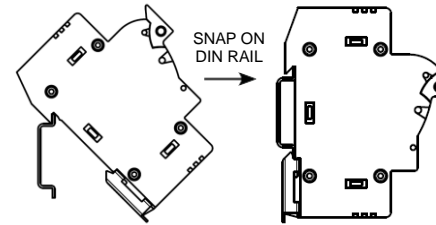

Fuse link replace

Disassembly

