



			B38 Fuel pipe	3	
			B37 Washer	1	
			B36 Fuel pump	1	
			B35 Balancer seat	1	
			B34 Balancer	1	
			B33 Pin	1	
			B32 Throttle Spring	1	
			B31 Throttle lever	1	
			B30 Grip cover	1	
			B29 Arm	1	
			B28 Fuel tank	1	
			B27 E-switch	1	
			B26 Retainer	1	
			B25 Gasket	1	
			B24 Fuel Tank Cap	1	
			B23 Damper	1	
			B22 Starter cover	1	
			B21 LH guide	1	
			B20 Spring	1	
			B19 Ripe	1	
			B18 Spring cover	1	
			B17 Starter handle	1	
			B16 Spring	1	
			B15 Screw ST4X8	1	
			B14 Starter wheel	1	
			B13 Washers6Xø16Xø1.2	1	
			B12 Cover	1	
			B11 Dust cover	4	
			B10 Front handle	1	
			B9 Spring	1	
			B8 Spacer	1	
			B7 Bolt	9	
			B6 Chain catcher	1	
			B5 M5X14 Bolt	13	
			B4 Cylinder cover	1	
			B3 Air filter cover	1	
			B2 Lock catch	2	
			B1 Engine ass'y	1	
			No. Parts description	Note	Note
B73	Chain cover	1			
B72	Bar	1			
B71	Saw chain	1			
B70	Brake lever	1			
B69	Brake lever	1			
B68	Pinsø3	2			
B67	Slide arm	1			
B66	Brake spring	1			
B65	Brake spring	1			
B64	Pin	1			
B63	Washersø6Xø20X1.2	1			
B62	Plate	1			
B61	Front guard	1			
B60	Snap ring	1			
B59	Pin	1			
B58	Cap	1			
B57	Nut M8	2			
B56	Chain cover	1			
B55	Protector	1			
B54	Brake bard	1			
B53	Chain catcher	1			
B52	Retainer	1			
B51	Nut	1			
B50	Screw	1			
B49	Plate	1			
B48	Spacer	1			
B47	Ring	2			
B46	Washersø6Xø16X0.8	1			
B45	Spring	1			
B44	Screw ST4X8	5			
B43	Cover	1			
B42	Damper	1			
B41	Fuel filter	1			
B40	Clip	1			
B39	Pipe seat	1			